

 

 

 



 

















 



 


 



 
 




















## PRIMO SING 2U PARTS LIST

Item No.	Parts Name	Diagram	Qty (Pcs)
PRS-01	Upper hub-bottom		1
PRS-02	Electric box on upper hub-top		1
PRS-03	Electric box cover		1
PRS-04	Stainless steel screw (dia.4x12)		8
PRS-05	Umbrella cap		1
PRS-06	Stainless steel screw(dia.4x25)		8
PRS-07	Pulley		1
PRS-08	Pulley pin		1
PRS-09	Upper pole - $\underline{A}$ 21.65"		1
PRS-10	Rib connector		8
PRS-11	Stainless Steel Bolt dia. M5*25		8
PRS-12	M5 nut		8
PRS-13	Long rib - 53.35" length		8
PRS-14	Return arm end cap		8
PRS-15	Rib pin		16
PRS-16	Stop point		1
PRS-17	Lower hub - top		1
PRS-18	Lower hub - bottom		1
PRS-19	Stereo system		1
PRS-20	Circle light hood		1
PRS-21	Circle light holder		1
PRS-22	Stereo stainless steel bolt M5*50		2
PRS-23	Short rib		8
PRS-24-1	Crank housing(right)		1
PRS-24-2	Sleeve for main axle		1

PRS-24-3	washer		2
PRS-24-4	Spring		1
PRS-24-5	Rivet for crank		1
PRS-24-6	Crank handle ring		1
PRS-24-7	Crank handle		1
PRS-24-8	Washer for crank		1
PRS-24-9	Main axle		1
PRS-24-10	Crank housing (left)		1
PRS-24-11	Stainless steel screw dia.4*30		4
PRS-24-12	Pawl holder		1
PRS-24-13	Twist spring		1
PRS-24-14	Stainless steel screw dia.4*15		1
PRS-24-15	Ratchet wheel		1
PRS-24-16	Pin		1
PRS-24-17	M8 nut		1
PRS-24-18	Anti-movable washer		1
PRS-24-19	Pawl		1
PRS-24-20	Rivet		1
PRS-25	Sleeve for lower pole		1
PRS-26	Lower pole		1
PRS-27	Snap		2
PRS-28	Twist spring		1
PRS-29	Cap for lower pole		1
PRS-30	Kit for disassembling radio assembly		1
PRS-31	Connecting ring		2
PRS-32	Outer shell for batteries		1
PRS-33	Inner shell for batteries		1
PRS-34	Stainless steel screw dia.3*8		6
PRS-35	Radio assembly		1
PRS-36	MP3 holder		1
PRS-37	MP3 housing		1
PRS-38	Remote control		1
PRS-39	Remote control holder		1

PRS-40-1	Charger		1
PRS-40-2	Chargeable lithium battery		1
PRS-40-3	DC plug wire		2
PRS-40-4	Wire (0.12m)		1
PRS-40-5	Wire in upper pole		1
PRS-40-6	Wire in ribs		1
PRS-40-7	Stereo		1
PRS-40-8	LED light board		1
PRS-40-9	Switch board		1
PRS-40-10	Radio assembly		1
PRS-40-11	Antenna		1
PRS-40-12	Audio plug wire		1
PRS-40-13	Remote control main board		1
PRS-40-14	Key panel for remote control		1
PRS-40-15	7# battery		5
PRS-40-16	Rivet for switch board		4
PRS-40-17	Nylon soft sleeve		1
PRS-41	Protective washer		8
PRS-42	Fabric		1
PRS-43	Rope		1
PRS-44			